




# **WEATHERMASTER®**

# **2000**

**A GUIDE TO OPERATING  
AND MAINTAINING  
YOUR TRIPLE-SPLIT  
HEAT PUMP UNIT.**

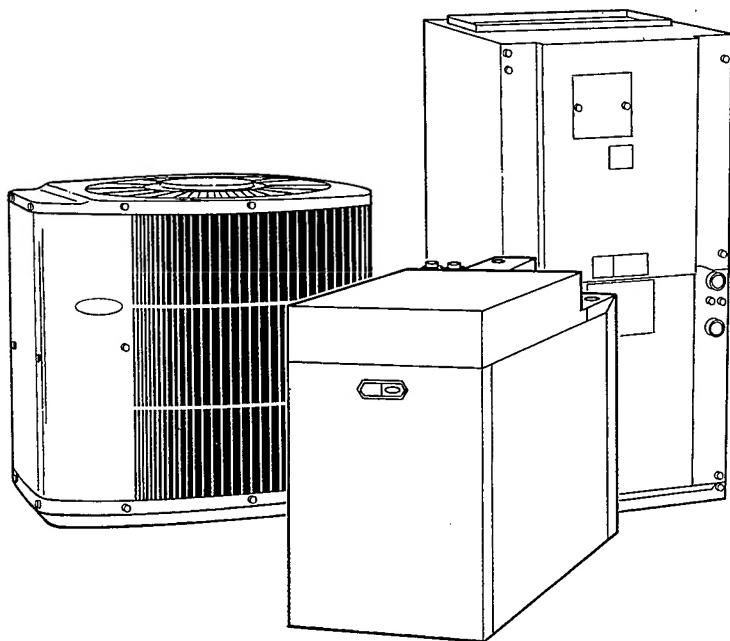

**NOTE TO INSTALLER:**  
This manual should be left with equipment user.

## WELCOME TO EFFICIENT YEAR-ROUND COMFORT

Congratulations on your excellent choice and sound investment in year-round home comfort!

Your new heat pump represents both the latest in engineering development and the culmination of many years of experience from one of the most reputable manufacturers of comfort systems.

Your new unit is among the most energy-efficient and reliable heat pump products available today. To assure its dependability, spend just a few minutes with this booklet now. Learn about the operation of your heat pump, and the small amount of maintenance it takes to keep it operating at its peak efficiency.

With minimal care, your new heat pump will provide you and your family with year-round home comfort—both now and for years to come.

### ⚠ WARNING

Improper installation, adjustment, alteration, service, maintenance or use can cause explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency or your distributor or branch for information or assistance. The qualified installer or agency must use factory authorized kits or accessories when modifying this product.

### ⚠ WARNING

To prevent personal injury, death, or property damage, before operating your new heat pump, read and follow all instructions and warnings, including labels shipped with or attached to unit.

## YOUR COMFORT SYSTEM

### Identifying Your System

Take the time to familiarize yourself with the type of system you have. This knowledge will be of use in understanding the basic operation of your new heat pump.

The triple split-system type has an indoor fan coil, indoor compressor section and an outdoor unit, two of which contain a coil. These units are interconnected by refrigerant tubes, as shown in Fig. 1.

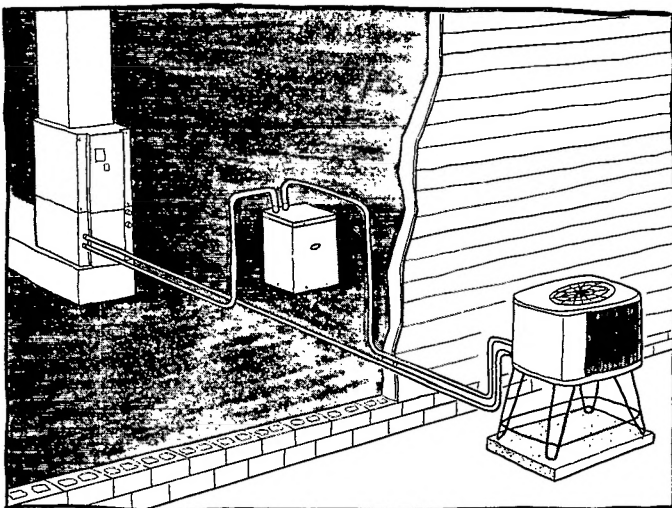


Fig. 1—Triple Split-System Installation

Each unit has a rating plate affixed to it. A rating plate provides necessary information for specific identification of a unit. You should familiarize yourself with the product, model, and serial numbers listed on each rating plate.

## IMPORTANT FACTS

To better protect your investment and to eliminate unnecessary service calls, familiarize yourself with the following facts:

- Your heat pump system should never be operated without a clean air filter properly installed. Plan to inspect the filter periodically. A clogged air filter will increase operating costs and shorten the life of the unit.

- Supply-air and return-air registers should not be blocked. Drapes, furniture, and toys are some of the items commonly found obstructing grilles. Restricted airflow lessens the unit's efficiency and life span.

- The outdoor unit must have unrestricted airflow. Do not cover the unit, lean anything against it, or stand upon it. Do not allow grass clippings, leaves, or other debris to accumulate around or on top of the unit. Maintain a twelve-in. minimum clearance between the outdoor unit and tall grass, vines, shrubs, et cetera.

- Your multipurpose indoor thermostat is the control center for your heat pump system. You should familiarize yourself with its proper operation. Attempting to control the system by other means—for instance, switching the electrical supply power ON and OFF—may cause damage to the unit.

- Thermostat "jiggling" causes rapid-cycling, which is potentially damaging to the compressor. Do not move the temperature selector on the thermostat for any reason for at least 5 minutes after the compressor has shut off.


- During the heating season, never increase the indoor thermostat setting more than one or two-degree increments. If larger adjustments are made, the supplementary heating source will be turned on automatically. Needless use of the supplementary heat reduces potential energy savings.

- You may find that you can maintain greater personal comfort by running the fan continuously. "Air pockets" can form due to the structure of the house, placement of registers, et cetera. These air pockets may be too cool or warm for your liking. Continuous fan operation minimizes any temperature differences. Also, systems equipped with electronic air cleaners and/or humidifiers offer the added benefits of having the air continuously cleaned year-round, and humidified during the winter season.

- Your heat pump will remove humidity from your home during the cooling season. After a few minutes of operation, you should be able to see water trickle from the condensate drain of the cooling coil. Check this occasionally to be sure the drain system is not clogged. Of course, don't expect to see much drainage if you live in a very dry environment.

- During the heating cycle, air from your registers may seem cooler than you might first expect. This is because the air is being delivered at a higher velocity and a more constant flow than air supplied by a conventional furnace. Also, your heat pump supplies air at 85 to 90 degrees Fahrenheit instead of in sudden bursts of hot air as with a conventional furnace. The air may feel cool because it is slightly less than your body temperature. However, it is sufficiently warm to keep you comfortable.

- Ice or frost will tend to form on the outdoor coil during the winter heating operation. Your heat pump is designed to automatically melt the ice. When in this defrost cycle, it is

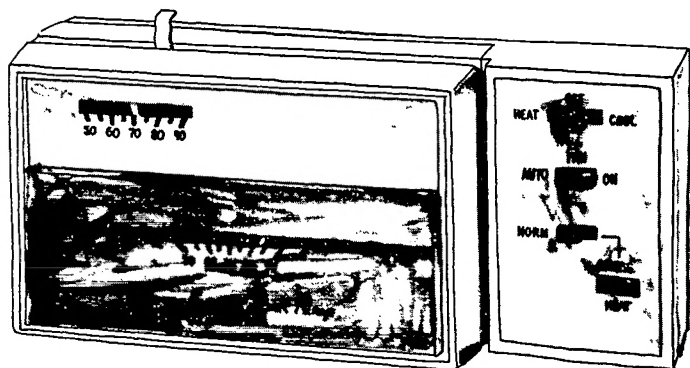

**Fig. 2—Manual Changeover Thermostat**

normal for steam or fog to rise from the outdoor unit. Do not be alarmed!

- Do not operate your unit in cooling mode when outdoor temperatures are below 55 F.
- Do not operate your unit in heating mode when outdoor temperatures are above 66 F.

## OPERATING YOUR HEAT PUMP

The operation of your heat pump system is controlled by the indoor thermostat. You simply adjust the thermostat and it maintains the indoor temperature at the level you select. Most thermostats for heat pump systems have four controls. These are the temperature control selector, FAN switch, SYSTEM switch, and EMERGENCY HEAT switch.

The temperature control selector is a dial or lever that allows you to establish the degree of temperature that you wish to maintain for your personal comfort. Some thermostats possess two temperature control selectors: one for setting the temperature desired during the cooling cycle, and one to set the heating operation temperature. Typical settings are 78 degrees Fahrenheit for cooling and 68 degrees for heating.

The FAN switch offers two options for controlling the blower: AUTO and ON. When set to AUTO, the blower will run during the time the heat pump is operating. When the FAN switch is set at the ON position, the blower will run continuously.

Typically, the SYSTEM switch on your thermostat offers the following selections: COOL, OFF, and HEAT. Your thermostat may also have a fourth selection, AUTO. The heat pump will not operate when the SYSTEM switch is set at the OFF position. With the SYSTEM switch set at COOL, your heat pump will operate in its cooling mode when the indoor temperature rises above the level that you wish to maintain. With the SYSTEM switch set at the HEAT position, your heat pump will provide warmth whenever the indoor temperature falls below the level that you have selected.

The AUTO selection found on some thermostats provides for automatic changeover between cooling and heating cycles. With the SYSTEM switch set in the AUTO position, the cooling mode is activated when the indoor temperature rises above the thermostat cooling temperature setting, or the heating mode will be activated when the indoor temperature drops below the thermostat setting for the heating cycle.

Depending on your typical winter heating needs, your home comfort system may include a supplementary heating source. The EMERGENCY HEAT switch provides for convenient selection between the two heating appliances. Your heat pump will operate when the switch is set at NORMAL. With the switch set at the EMERGENCY HEAT position, the heat pump will turn off and the supplementary heat source will be activated.

## COOLING CYCLE

When operating in the cooling cycle, your heat pump will run until the indoor temperature is lowered to the level you have selected. On extremely hot days, your conditioner will run for longer periods at a time and have shorter "off" periods than on moderate days.

The following are typical conditions that add extra heat and/or humidity to your home. Your cooling unit will work longer to keep your home comfortable under these conditions:

- Entrance doors are frequently opened and closed
- Laundry appliances are being operated
- A shower is running
- More than the usual number of people are present in the home
- More than the normal number of electric lights are in use
- Drapes are open on the sunny side of the home


## HEATING CYCLE

With the SYSTEM switch of your indoor thermostat set to the HEAT position, the heating section of your home comfort system will operate until room temperature is raised to the level you have selected. Of course, the heating unit will have to operate for longer periods to maintain a comfortable environment on cooler days and nights than on moderate ones.

Refer to your furnace user's manual for specific information on heating operation.

## DEFROST CYCLE

When your heat pump is providing heat to your home and the outdoor temperature drops below 45 degrees Fahrenheit, moisture may begin to freeze on the surface of the outdoor coil. If allowed to build up, this ice would impede airflow across the coil and reduce the amount of heat absorbed

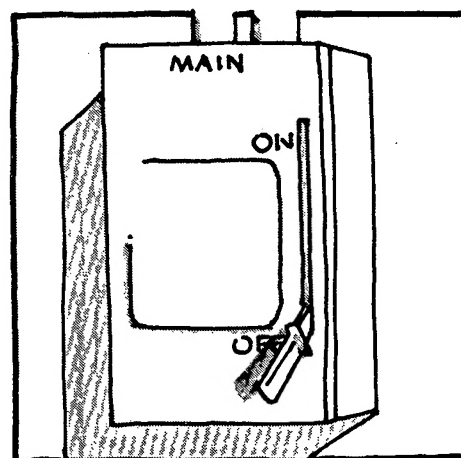

**Fig. 3—Main Electrical Disconnect**

from the outside air. So, to maintain energy-efficient operation, your heat pump has an automatic defrost cycle.

The defrost cycle starts at a preset time interval of 90 minutes, although, it may be reset to either 30 or 50 minutes. Defrost will start at the preset time only if the ice is sufficient to interfere with normal heating operation.

After the ice is melted from the outdoor coil, or after a maximum of 10 minutes in the defrost mode, the unit will automatically switch back to normal heating operation.

Do not be alarmed if steam or fog appears at the outdoor unit during the defrost cycle. Water vapor from the melting ice may condense into a mist in the cold outside air.

During certain weather conditions such as heavy snow and freezing rain it is not uncommon for ice to build up on the outdoor unit grille. This is normal for these weather conditions. Do not attempt to remove the ice from the outdoor unit grille. This condition will not affect the proper function of the unit and will clear within a few days.

### EMERGENCY HEAT

The EMERGENCY HEAT setting on your thermostat refers to any supplementary heating appliance that may be included in your home comfort system. Operation of the EMERGENCY HEAT source may be required if heating demands exceed the capacity of the heat pump, or if the heat pump malfunctions.

The red light on your thermostat will glow if the EMERGENCY HEAT switch is moved from NORMAL to the EMERGENCY HEAT setting. See Fig. 4. This indicates that the heat pump is off and the supplemental heating appliance is selected for operation.

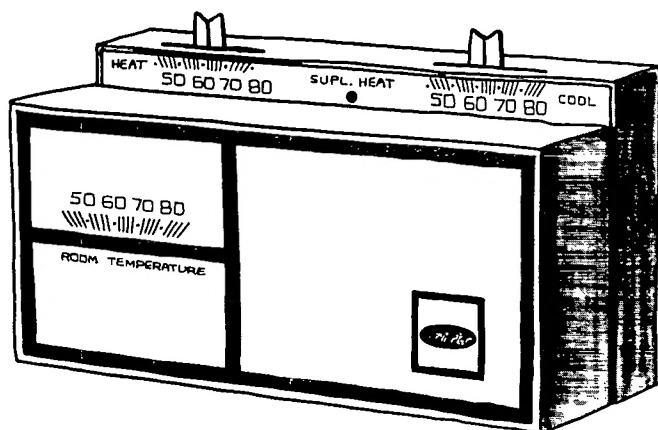


Fig. 4—Thermostat with Emergency Heat Indicator

Also, if your particular model of heat pump includes an "efficiency alarm" circuit, the red light will glow if the compressor malfunctions. Call your dealer for immediate service if you suspect trouble.

During the heating season, switch to EMERGENCY HEAT if the electricity to your outdoor unit has been off for more than 30 minutes for any reason (i.e., power outage). Leave the switch in the EMERGENCY HEAT position for an amount of time equal to that during which the power was off. It isn't necessary to exceed 12 hours. If you cannot determine how long the power has been off, leave the switch in the EMERGENCY HEAT position for 8 hours.

**NOTE:** The EMERGENCY HEAT switch is effective only when the SYSTEM switch is set at the HEAT or AUTO position.

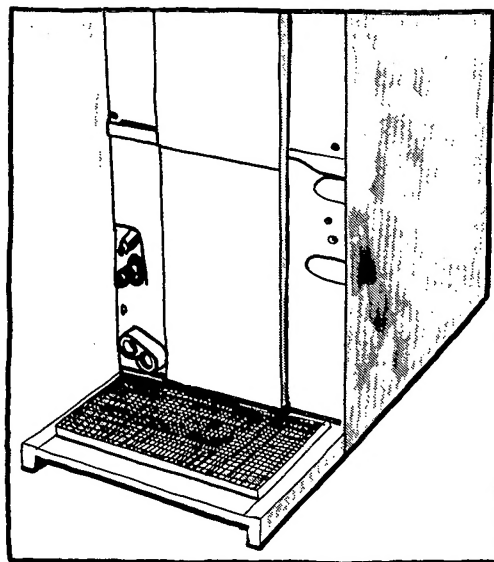


Fig. 5—Removing Filter from Fan Coil Unit

### PERFORMING ROUTINE MAINTENANCE

With the proper maintenance and care, your heat pump unit will operate economically and dependably. Maintenance can be accomplished easily by referring to the following directions. However, before performing maintenance, consider these important safety precautions:

- **DISCONNECT ALL ELECTRICAL POWER TO THE AIR CONDITIONER BEFORE REMOVING ACCESS PANELS TO PERFORM MAINTENANCE.** Disconnect power to both the indoor and outdoor units. **NOTE: THERE MAY BE MORE THAN ONE ELECTRICAL DISCONNECT SWITCH.**

- **ALTHOUGH SPECIAL CARE HAS BEEN TAKEN TO MINIMIZE SHARP EDGES IN THE CONSTRUCTION OF YOUR UNIT, BE EXTREMELY CAREFUL WHEN HANDLING PARTS OR REACHING INTO THE UNIT.**

#### CHECK THE AIR FILTER

A dirty air filter will cause excessive strain on the compressor and blower motor. This can cause the components to over-heat and automatically shut down. In the extreme, the components will fail and need to be replaced. To avoid inefficient or failed operation of your unit, **CHECK THE FILTER(S) EVERY 3 TO 4 WEEKS.** Replace filter(s) when necessary, or clean the filter(s) if you have the reusable type.

Disposable filters should be replaced by similar, new filters of the same dimensions.

Reusable, permanent filters should be washed in a solution of cold water and mild detergent, then rinsed and thoroughly dried. **THE FILTER MUST BE COMPLETELY DRY BEFORE BEING REINSTALLED.** To avoid prolonged shutdown of your unit while a filter is drying, you should have an extra filter on hand. This would allow you to rotate between the two with minimal downtime for your comfort system. Extra filters may be purchased from your dealer.

There are no filters in the outdoor unit of a split-system. If your indoor unit is a gas or oil furnace, refer to your furnace owner's manual for filter location and procedures for replacement or cleaning.

If your system includes an indoor fan coil unit, the filter is located in the unit where it connects with the return-air duct or plenum. See Fig. 4. Remove the two black thumbscrews (or, plastic pull rings on modular fan coil), then pull out the rack and filter. The clean filter must be reinstalled with the cross-hatched side facing the blower. With the clean filter in place, secure the spring tensioner, slide the tray into the unit, then secure the thumbscrews.

#### INDOOR COIL

If the split-system coil has only been operated with a clean filter in place, it should require minimal cleaning. You may use a vacuum cleaner and soft brush attachment to remove any accumulation of dust from the top and underside of the finned coil surface. However, perform this maintenance only when the coil is completely dry.

If you cannot get the coil clean by this method call your dealer for service. It may be necessary to clean the coil with a detergent solution and rinse it with water. This could require the removal of the coil. You should not attempt this yourself.

#### OUTDOOR COIL

If grass clippings, leaves, shrubbery, and debris are kept away from the outdoor unit, minimal care should be sufficient to keep the system functioning properly. For proper drainage, debris must be removed periodically from the base pan. However, if the outdoor coil becomes dirty, use a brush or vacuum cleaner and soft brush attachment to clean the exterior surface. If dirt is deep in the coil, contact your dealer for service. The outdoor fan motor may have to be disconnected and the top panel removed to gain access to the coil for thorough cleaning. Do not attempt this yourself.

#### OUTDOOR COIL—SEA COAST

If your unit is located near the ocean, special maintenance is required. Ocean mist/breeze carries salt, which is corrosive to most metals. Although your new unit is made out of galvanized metal and is protected by top grade paint, you should take the precaution of additional maintenance. This additional maintenance consists of periodic washing of the unit. By washing all exposed surfaces and coil you will be adding additional life to your unit. Please consult your installing contractor for proper intervals/procedures for your geographic area or service contact.

#### UNIT SUPPORT

Your split-system outdoor unit should be maintained at a level position. If its support should shift or settle so that the unit is no longer level, you should correct the condition. Relevel it promptly to assure condensate drainage out of the unit. If you notice that water or ice collects beneath the unit, arrange for it to be drained away from the unit.

### BEFORE YOU REQUEST A "SERVICE CALL"

#### BEFORE YOU CALL FOR SERVICE, CHECK FOR THESE EASILY SOLVED PROBLEMS:


- Check the indoor and outdoor disconnect switches. Verify that circuit breakers are ON or that fuses have not blown.
- Check for sufficient airflow. Check the air filter(s) for any accumulations of dirt. Check for blocked return-air or supply-air grilles. Be sure grilles are open and unobstructed.

- Check the settings on your indoor thermostat. If you desire cooling, see that the temperature control selector is set below room temperature and the SYSTEM switch is on the COOL or AUTO position. If you require warmth, be sure the temperature control selector is set above room temperature and the SYSTEM switch is at HEAT or AUTO. The FAN switch should be set at ON for continuous blower operation or AUTO if you wish blower to function only while the unit is operating.

If your comfort system still fails to operate, contact your servicing dealer for troubleshooting and repairs. Specify your apparent problem, and state the model and serial numbers of your equipment. (You should have them recorded on Pages 5 & 6 of this booklet.) With this information, your dealer may be able to offer helpful suggestions over the phone or save valuable time through knowledgeable preparation for the service call.

### REGULAR DEALER MAINTENANCE

In addition to the routine maintenance that you perform, your home comfort system should be inspected regularly by a properly trained service technician. The inspection (preferable twice each year, but at least once every year) should include the following:

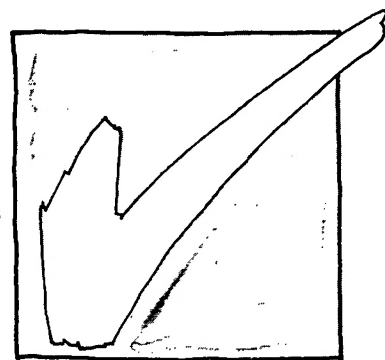

- Routine inspection of air filter(s). Replacement or cleaning as required.
- Inspection and cleaning of the blower wheel, housing, and motor as required.
- Inspection and, if required, cleaning of indoor and outdoor coils.
- Inspection of the indoor coil drain pan, plus the primary and secondary drain lines. If supplied, the auxiliary drain pan and line should be inspected at this time. Service should include cleaning if required.
- A check of all electrical wiring and connections.
- A check for secure physical connections of individual components within units.
- Operational check of the heat pump system to determine actual working condition. Necessary repair and/or adjustment should be performed at this time.

Your servicing dealer may offer an economical service contract that covers seasonal inspections. Ask for further details.

#### FOR THE RECORD

Record the model, product, and serial numbers of your new equipment in the spaces provided below. This information, along with the other ready-reference facts requested below, will be necessary should you ever require information or service.

**Installation Data**

Date Installed \_\_\_\_\_

Dealer Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_ Zip \_\_\_\_\_

Telephone \_\_\_\_\_

**Split-System**

**Outdoor Unit:**

Product No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**Indoor Compressor Unit:**

Product No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**Indoor Unit or Coil:**

Product No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**Modular Indoor Unit, if Applicable:**

Blower—Product No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Coil—Product No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Heater—Product No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# IMPORTANT: Complete, detach and mail immediately for . . . PRODUCT REGISTRATION

THE FEDERAL CONSUMER PRODUCT SAFETY ACT REQUIRES THAT YOU BE NOTIFIED OF ANY RECALLS INVOLVING THIS PRODUCT. YOUR NAME AND ADDRESS AND THE MODEL AND SERIAL NUMBERS OF YOUR PRODUCT WILL ASSIST US IN NOTIFYING YOU SHOULD THE NEED ARISE.

Your warranty coverage is not dependent upon the return of this card.

89B

1. ☐ Mr. 2. ☐ Mrs. 3. ☐ Ms. 4. ☐ Miss

Name (First/Initial/Last)

Street

City

State

Zip

MODEL NO.

(Copy from rating plate on unit.)

SERIAL NO.

2. DATE INSTALLED

Mo. Day Yr.

3. What Carrier product did you purchase?

- ☐ Central air conditioner
- ☐ Gas furnace
- ☐ Oil furnace
- ☐ Electric furnace
- ☐ Heat pump

4. When did you acquire your Carrier product?

- ☐ Upon purchase of new dwelling
- ☐ To replace an older Carrier system
- ☐ To replace an older non-Carrier system
- ☐ Within a year of buying new dwelling with no central air system
- ☐ 2-4 years after buying dwelling with no central air system
- ☐ Over 4 years after buying dwelling with no central air system

5. If this was a replacement product, how old was the original?

- ☐ 1-5 years
- ☐ 6-8 years
- ☐ 9-11 years
- ☐ 12-14 years
- ☐ 15-17 years
- ☐ 18 & over years

6. Your product is installed in?

- ☐ Single Family/Townhouse
- ☐ Multi-Family: 2-4 units
- ☐ Mobile home
- ☐ Apartment: 1-3 floors
- ☐ Apartment: 4 + floors
- ☐ Office/Bank
- ☐ Store
- ☐ Hospital/School
- ☐ Manufacturing building
- ☐ Other

7. What 2 factors most influenced your purchase?

- ☐ Carrier reputation
- ☐ Friend's recommendation
- ☐ Contractor/Dealer's recommendation
- ☐ Price
- ☐ Energy efficiency
- ☐ Ready availability
- ☐ Radio ads
- ☐ TV ads
- ☐ Newspaper ads
- ☐ Magazine ads
- ☐ Dealer display

8. Which of the following have you done in the past 6 months? (check all that apply)

- ☐ Redeemed a product coupon
- ☐ Ordered an item from mail order catalog
- ☐ Sent in product inquiry card from magazine
- ☐ Bought an item from offer received in mail
- ☐ Entered sweepstakes/contest

9. In which age group are you?

- ☐ 18-24
- ☐ 25-34
- ☐ 35-44
- ☐ 45-54
- ☐ 55-64
- ☐ 65 & over

10. Marital status:

- ☐ Married
- ☐ Unmarried

11. Which group best describes your family income?

- ☐ Under \$10,000
- ☐ \$10,000-\$14,999
- ☐ \$15,000-\$19,999
- ☐ \$20,000-\$24,999
- ☐ \$25,000-\$29,999
- ☐ \$30,000-\$34,999
- ☐ \$35,000-\$39,999
- ☐ \$40,000-\$44,999
- ☐ \$45,000-\$49,999
- ☐ \$50,000 & over

12. Do you have any children in any of the following age groups who are living at home?

- ☐ Under age 2
- ☐ Age 2-4
- ☐ Age 5-7
- ☐ Age 8-10
- ☐ Age 11-12
- ☐ Age 13-15
- ☐ Age 16-18

13. For your primary residence, do you:

- ☐ Own a house?
- ☐ Rent a house?
- ☐ Own a townhouse/condominium?
- ☐ Rent an apartment?

14. Which of the following types of credit cards do you use?

- ☐ Travel/Entertainment (American Express, Diners Club, Carte Blanche)
- ☐ Bank (Master Charge, Visa)
- ☐ Gas, department store, etc.

15. What is your occupation? (check one)

- ☐ Professional/Technical
- ☐ Upper Mgt./Administrator
- ☐ Sales/Service/Middle Mgt.
- ☐ Clerical/White Collar
- ☐ Craftsman/Blue Collar
- ☐ Student
- ☐ Housewife
- ☐ Retired

16. Which of the following interests and hobbies do you and your family enjoy?

- ☐ Tennis
- ☐ Golf
- ☐ Snow Skiing
- ☐ Running/Jogging
- ☐ Camping/Hiking
- ☐ Hunting/Shooting
- ☐ Fishing
- ☐ Bicycling
- ☐ Racquetball
- ☐ Sailing/Boating
- ☐ Stamp/Coin Collecting
- ☐ Motorbiking/Motorcycling
- ☐ Home Video Games
- ☐ Physical Fitness/Exercise
- ☐ Home Video Recording
- ☐ Recreational Vehicle/4-WD
- ☐ Photography
- ☐ CB Radio
- ☐ Home Workshop/Do-it-Yourself
- ☐ Gardening/Plants
- ☐ Electronics
- ☐ Automotive Work
- ☐ Sewing/Needlework
- ☐ Crafts
- ☐ Collectibles/Collections
- ☐ Art & Antiques
- ☐ Stereo Music Equipment
- ☐ Foreign Travel
- ☐ Attending Cultural/Arts Events

Fold Here

30. ☐ Gourmet Foods/Cooking  
31. ☐ Health/Natural Foods  
32. ☐ Wines  
33. ☐ Fashion Clothing  
34. ☐ Home Furnishings/Decorating  
35. ☐ Records & Tapes  
36. ☐ Avid Book Reading  
37. ☐ Science Fiction  
38. ☐ Astrology/Occult  
39. ☐ Stock/Bond Investments  
40. ☐ Real Estate Investments  
41. ☐ Self Improvement Programs  
42. ☐ Community/Civic Activities

We appreciate your taking the time to complete this card: the information provided will help us serve you better in the future. We participate in a multi-company program whereby you can receive information about new products, developments, trends, etc. related to the interest areas and other information you have indicated above. Please check here if you would prefer not to learn about such products and services. ☐

Other comments & suggestions about our product:

PLACE  
FIRST CLASS  
STAMP  
HERE

CARRIER AIR CONDITIONING  
Product Registration Center  
P.O. Box 17686  
Denver, Colorado 80217



# Carrier Air Conditioning

Division of  
Carrier Corporation

**Carrier**

## IF YOUR UNIT DOES NOT WORK, FOLLOW THESE STEPS IN ORDER:

**FIRST:** Contact the installer. You may find his name on the product or in your Homeowner's Packet. If his name is not known, call your builder if yours is a new residence.

**SECOND:** Contact the nearest CARRIER distributor. (See telephone yellow pages.)

**THIRD:** Contact:  
Carrier Air Conditioning  
Consumer Relations Department  
Summit Landing  
Carrier Parkway  
Syracuse, New York 13221  
Telephone: (315) 432-7651

Unit Model No. \_\_\_\_\_

Unit Serial No. \_\_\_\_\_

Date of Installation \_\_\_\_\_

Installed By \_\_\_\_\_

Name of Owner \_\_\_\_\_

Address of Installation \_\_\_\_\_

## Extended Protection Limited Warranty

**ONE-YEAR WARRANTY**—This CARRIER product is warranted to be free from defects in material and workmanship under normal use and maintenance for a period of one year from the date of original installation, whether or not actual use begins on that date. A new or remanufactured part to replace any defective part will be provided at Carrier's sole option without charge for the part itself, PROVIDED the defective part is returned to our distributor. This warranty applies only to the product in its original installation location and is voided if the product is reinstalled elsewhere.

**THIS WARRANTY DOES NOT INCLUDE LABOR** or other costs incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts or replacement parts. SUCH COSTS MAY BE COVERED BY a separate warranty provided by the installer.

**EXTENDED FOUR-YEAR WARRANTY ON COMPRESSOR ONLY**—During the second through fifth years after the date of original installation, CARRIER further warrants the compressor against defects in material or workmanship under normal use and maintenance. A new or remanufactured compressor will be provided at Carrier's sole option under the same conditions as stated in the One-Year Warranty.

**LIMITATIONS OF WARRANTIES**—ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH EACH LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON WHATSOEVER.

**ALL WORK UNDER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING NORMAL WORKING HOURS. ALL REPLACEMENT PARTS, WHETHER NEW OR REMANUFACTURED, ASSUME AS THEIR WARRANTY PERIOD ONLY THE REMAINING TIME PERIOD OF THIS WARRANTY.**

### CARRIER WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation and servicing instructions or owners manual including coil cleaning, filter cleaning and/or replacement and lubrication.
2. Damage or repairs required as a consequence of faulty installation or application by others.
3. Failure to start due to voltage conditions, blown fuses, open circuit breakers or other damages due to the inadequacy or interruption of electrical service.
4. Damage or repairs needed as a consequence of any misapplication, abuse, improper servicing, unauthorized alteration or improper operation.
5. Damage as a result of floods, winds, fires, lightning, accidents, corrosive atmosphere or other conditions beyond the control of CARRIER.
6. Parts not supplied or designated by CARRIER.
7. CARRIER products installed outside the continental U.S.A., Alaska, Hawaii and Canada.
8. Electricity or fuel costs or increases in electricity or fuel costs from any reason whatsoever including additional or unusual use of supplemental electric heat.
9. ANY SPECIAL, INDIRECT OR CONSEQUENTIAL PROPERTY OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Form No. 530-001 (Rev. 11/89)





HEATING & COOLING

TO OBTAIN INFORMATION ON PARTS: Consult your installing dealer or classified section of your local telephone directory under the "Heating Equipment" or "Air Conditioning Contractors & Systems" headings for dealer listing by brand name. Have available the Model No., Series Letter & Serial No. of your equipment to insure correct replacement part.

**Carrier Corporation • Syracuse, New York 13221**

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.